

LP-PK Installation

Panel Set-Up Software Installation & Registration



Lighting Panel Controller LP-PK Setup Software

Software Installation of LP-PK

- 1) For LP-PK versions 4.03 and higher, use the Uninstall utility to remove previous versions of LP-PK.
- 2) From new CD or network browse to LP-PK4.03Distro/Setup.exe and open.
- 3) Follow the instructions and install LP-PK.
- 4) At the end of the installation process you may launch LP-PK or browse to LP-PK.exe and open. The product screen appears (click "OK"), and then the Software Registration dialog box appears. (If the old version starts, check that no old versions exist, especially in folders other than C:\Program Files\Turnkey Lighting Control and delete manually if needed.)
- 5) The registration screen shows a six character Software Code and a space to enter the Activation code. Record the software code. The code is case-sensitive.
- 6) Obtain the Activation Code by calling Turnkey Lighting Control Technical Support or Customer Service during normal business hours. You may also complete the process at any time by visiting the Turnkey Lighting Control website. Refer to section "Online Software Registration" below for instruction on how to register through the Turnkey Lighting Control website.



Online LP-PK Software Registration

- 1) Run LP-PK. LP-PK Software registration will appear.
- 2) Go to www.TRIATEKLighting.com. Select Technical Support from the left menu. Select > Applications > LP-PK - Application Registration from the right menu, and follow the instructions.
- 3) The LP-PK Application Registration page will provide you with an executable file program that will launch the LP-PK Key Generator. Save the program or Open the program to run it immediately. The LP-PK Key Generator screen will appear.
- 4) Copy the Software Code from the LP-PK Software Registration screen (1) and enter it into the "Controller Software Code" field of the Key Generator screen (2).
- 5) Click the "Generate Key" button (3) and the liberation key (registration key) will appear. Click in the "Generate File" check box if you want the key to be generated and saved in a file. Copy the key (4), and enter that key into the "Activation Code" field in the LP-PK registration screen (5).
- 6) Click the Activate button (6), and the "Product Activated" message box appears confirming successful activation. Click "OK" to close the screen (7), and the LP-PK connect screen appears. The diagram below helps to visualize the registration process.

